



# TOMS OFFROAD

## Tilt Column Steering Wheel Installation



Fig 1. - Un-box tilt column and it should look like the above picture



Discard these items- Not used for this application

Fig 2. - These parts are included in the adapter kits, but are not utilized. Please discard.



Fig 3. - Begin install by putting splined adapter hub on first.



Fig 4. - Install adapter cover to column next, lining up the holes in the cover to the adapter hub.

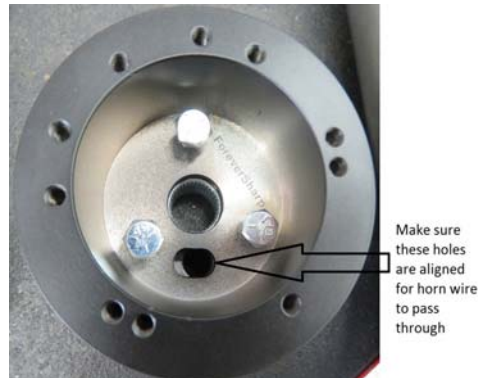


Fig 5. - Install wheel hub, lining up the three 1/4" holes with the adapter hub. Be sure elongated hole is lined up, allowing the horn wire to pass through. It will Only line up one way. The horn pedestal from the tilt column fits through this hole.



Tighten the three supplied shoulder bolts making sure not to overtighten.  
NOTE- Bolts will not be able to tighten all the way down, as the shoulder will catch.

