

Steering Wheel Ground for “Muscle” Steering Wheels

When installing our “Muscle” Steering Wheel on your 1974-77 Bronco (or anytime you are using a horn relay), you will need to ground the horn button. There is a red wire included with the adapter kit. One end should mount to the back side of the horn button as shown in the picture below. The other end should be cut and stripped to reveal the bare wire. It should be wrapped around one of the three adapter mounting bolts. Alternatively, an eyelet end could be installed instead of stripping and pinching the wire on the mounting bolt for a cleaner installation.

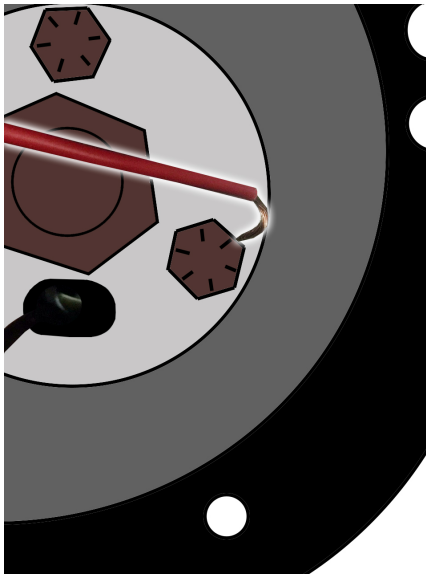


Illustration 1: Strip Ground Wire

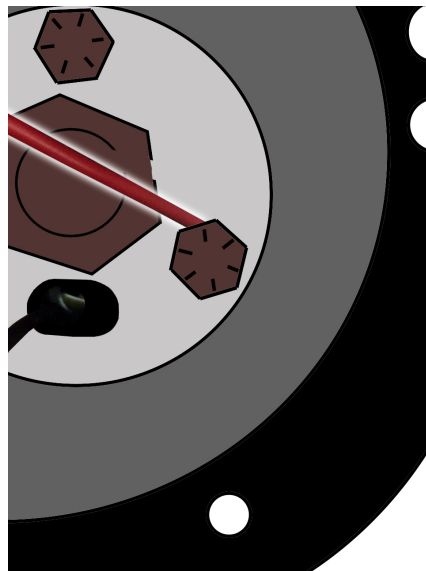


Illustration 2: Pinch Ground under Bolt

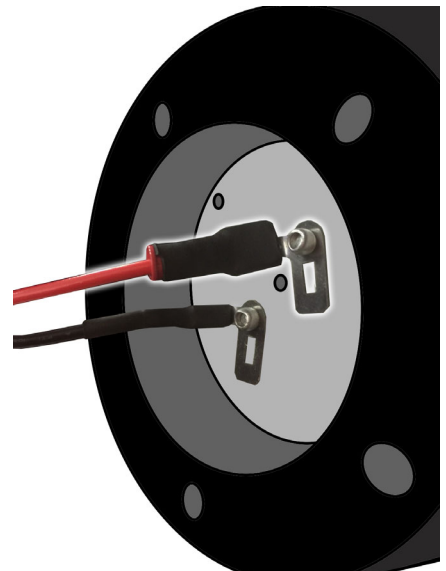


Illustration 3: Connect Opposite End to Horn Button